

# Maintenance Schedule

Performing regular maintenance according to the factory-recommended Maintenance Schedule is the best way to keep your Honda running in optimal condition.

Each vehicle has its own maintenance needs, so Honda develops specific maintenance schedules based on model equipment, such as transmission choice or the addition of a towing package.

The Maintenance Schedule calculates service needs based on your car's mileage. It checks engine-operating conditions and helps coordinate oil service dates and other maintenance check-ups. Prevent problems before they occur.

In order to view the maintenance schedule for a specific vehicle, please sign in — to view a saved vehicle — or choose a model.

[Normal](#)

Severe

7,500 miles/6 mos

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.

15,000 miles/1 yr

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.
- Replace engine oil filter.
- Inspect front and rear brakes.
- Check parking brake adjustment. Should be fully applied within 9 to 13 clicks.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft for cracks and check boot bands for tightness.
- Inspect brake hoses and lines (including ABS). Check the master cylinder, proportioning control valve and ABS modulator for damage and leakage.
- Check all fluid levels, condition of fluids and check for leaks. If needed, add transmission fluid, engine coolant, brake fluid, power steering fluid, and windshield washer fluid.
- Inspect cooling system hoses and connections.
- Inspect exhaust system. Check catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.
- Inspect fuel lines and connections. Check for leaks.

22,500 miles/1.5 yrs

**6 Speed Manual - Recommended service:**

- Replace engine oil.

- Rotate tires.

30,000 miles/2 yrs

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.
- Replace engine oil filter.
- Inspect front and rear brakes.
- Check parking brake adjustment. Should be fully applied within 9 to 13 clicks.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft for cracks and check boot bands for tightness.
- Inspect brake hoses and lines (including ABS). Check the master cylinder, proportioning controlvalve and ABS modulator for damage and leakage.
- Check all fluid levels, condition of fluids and check for leaks. If needed, add transmission fluid, engine coolant, brake fluid, power steering fluid, and windshield washer fluid.
- Inspect cooling system hoses and connections.
- Inspect exhaust system. Check catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.
- Inspect fuel lines and connections. Check for leaks.
- Replace air cleaner element.
- Inspect and adjust drive belts.
- Replace micron air filter.
- Replace differential oil (use SAE90 hypoid gear oil, API classification GL5 or GL6).

37,500 miles

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.

45,000 miles/3 yrs

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.
- Replace engine oil filter.
- Inspect front and rear brakes.
- Check parking brake adjustment. Should be fully applied within 9 to 13 clicks.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft for cracks and check boot bands for tightness.
- Inspect brake hoses and lines (including ABS). Check the master cylinder, proportioning controlvalve and ABS modulator for damage and leakage.

- Check all fluid levels, condition of fluids and check for leaks. If needed, add transmission fluid, engine coolant, brake fluid, power steering fluid, and windshield washer fluid.
- Inspect cooling system hoses and connections.
- Inspect exhaust system. Check catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.
- Inspect fuel lines and connections. Check for leaks.
- Replace coolant; use Genuine Honda Antifreeze/Coolant mixed 50/50 with water.
- Replace brake fluid; use Genuine Honda DOT 3.

52,500 miles

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.

60,000 miles/4 yrs

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.
- Replace engine oil filter.
- Inspect front and rear brakes.
- Check parking brake adjustment. Should be fully applied within 9 to 13 clicks.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft for cracks and check boot bands for tightness.
- Inspect brake hoses and lines (including ABS). Check the master cylinder, proportioning control valve and ABS modulator for damage and leakage.
- Check all fluid levels, condition of fluids and check for leaks. If needed, add transmission fluid, engine coolant, brake fluid, power steering fluid, and windshield washer fluid.
- Inspect cooling system hoses and connections.
- Inspect exhaust system. Check catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.
- Inspect fuel lines and connections. Check for leaks.
- Replace air cleaner element.
- Inspect and adjust drive belts.
- Replace micron air filter.
- Replace differential oil (use SAE90 hypoid gear oil, API classification GL5 or GL6).

67,500 miles

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.

75,000 miles/5 yrs

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.
- Replace engine oil filter.
- Inspect front and rear brakes.
- Check parking brake adjustment. Should be fully applied within 9 to 13 clicks.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft for cracks and check boot bands for tightness.
- Inspect brake hoses and lines (including ABS). Check the master cylinder, proportioning controlvalve and ABS modulator for damage and leakage.
- Check all fluid levels, condition of fluids and check for leaks. If needed, add transmission fluid, engine coolant, brake fluid, power steering fluid, and windshield washer fluid.
- Inspect cooling system hoses and connections.
- Inspect exhaust system. Check catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.
- Inspect fuel lines and connections. Check for leaks.
- Replace coolant; use Genuine Honda Antifreeze/Coolant mixed 50/50 with water.

82,500 miles

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.

90,000 miles/6 yrs

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.
- Replace engine oil filter.
- Inspect front and rear brakes.
- Check parking brake adjustment. Should be fully applied within 9 to 13 clicks.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft for cracks and check boot bands for tightness.
- Inspect brake hoses and lines (including ABS). Check the master cylinder, proportioning controlvalve and ABS modulator for damage and leakage.
- Check all fluid levels, condition of fluids and check for leaks. If needed, add transmission fluid, engine coolant, brake fluid, power steering fluid, and windshield washer fluid.
- Inspect cooling system hoses and connections.
- Inspect exhaust system. Check catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.
- Inspect fuel lines and connections. Check for leaks.
- Replace air cleaner element.

- Inspect and adjust drive belts.
- Replace micron air filter.
- Replace differential oil (use SAE90 hypoid gear oil, API classification GL5 or GL6).
- Replace brake fluid; use Genuine Honda DOT 3.
- Replace transmission fluid; use Genuine Honda ATF or MTF.

97,500 miles

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.

105,000 miles/7 yrs

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.
- Replace engine oil filter.
- Inspect front and rear brakes.
- Check parking brake adjustment. Should be fully applied within 9 to 13 clicks.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft for cracks and check boot bands for tightness.
- Inspect brake hoses and lines (including ABS). Check the master cylinder, proportioning control valve and ABS modulator for damage and leakage.
- Check all fluid levels, condition of fluids and check for leaks. If needed, add transmission fluid, engine coolant, brake fluid, power steering fluid, and windshield washer fluid.
- Inspect cooling system hoses and connections.
- Inspect exhaust system. Check catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.
- Inspect fuel lines and connections. Check for leaks.
- Replace coolant; use Genuine Honda Antifreeze/Coolant mixed 50/50 with water.
- Check idle speed.
- Replace spark plugs.
- Check valve clearance when the engine is cold.

112,500 miles

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.

120,000 miles/8yrs

**6 Speed Manual - Recommended service:**

- Replace engine oil.
- Rotate tires.
- Replace engine oil filter.
- Inspect front and rear brakes.
- Check parking brake adjustment. Should be fully applied within 9 to 13 clicks.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft for cracks and check boot bands for tightness.
- Inspect brake hoses and lines (including ABS). Check the master cylinder, proportioning control valve and ABS modulator for damage and leakage.
- Check all fluid levels, condition of fluids and check for leaks. If needed, add transmission fluid, engine coolant, brake fluid, power steering fluid, and windshield washer fluid.
- Inspect cooling system hoses and connections.
- Inspect exhaust system. Check catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.
- Inspect fuel lines and connections. Check for leaks.
- Replace air cleaner element.
- Inspect and adjust drive belts.
- Replace micron air filter.
- Replace differential oil (use SAE90 hypoid gear oil, API classification GL5 or GL6).