

Maintenance Schedule

Performing regular maintenance according to the factory-recommended Maintenance Schedule is the best way to keep your Honda running in optimal condition.

Each vehicle has its own maintenance needs, so Honda develops specific maintenance schedules based on model equipment, such as transmission choice or the addition of a towing package.

The Maintenance Schedule calculates service needs based on your car's mileage. It checks engine-operating conditions and helps coordinate oil service dates and other maintenance check-ups. Prevent problems before they occur.

In order to view the maintenance schedule for a specific vehicle, please sign in — to view a saved vehicle — or choose a model.

[Normal](#)

Severe

7,500 mi/12,000 km

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

15,000 mi/24,000 km/1 yr

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.
- Inspect front and rear brakes.
- Replace engine oil filter.
- Check parking brake adjustment.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft boots.
- Inspect brake hoses and lines (including ABS).
- Check all fluid levels, condition of fluids and check for leaks.
- Inspect cooling system hoses and connections.
- #Inspect exhaust system.
- #Inspect fuel lines and connections.
- # = See information on maintenance and emissions warranty, last column, page 153 of [your owner's manual](#).

22,500 mi/36,000 km

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

30,000 mi/48,000 km/2 yrs

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.
- Inspect front and rear brakes.
- Replace engine oil filter.
- Check parking brake adjustment.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft boots.
- Inspect brake hoses and lines (including ABS).
- Check all fluid levels, condition of fluids and check for leaks.
- Inspect cooling system hoses and connections.
- #Inspect exhaust system.
- #Inspect fuel lines and connections.
- # = See information on maintenance and emissions warranty, last column, page 153 of your owner's manual.
- Replace air cleaner element.
- Replace rear differential fluid.
- Replace dust and pollen filter.
- Inspect drive belt.

37,500 mi/60,000 km

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

3 years

6 Speed Manual - Recommended service:

- Replace brake fluid (independent of mileage).

45,000 mi/72,000 km/3 yrs

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.
- Inspect front and rear brakes.
- Replace engine oil filter.
- Check parking brake adjustment.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft boots.
- Inspect brake hoses and lines (including ABS).

- Check all fluid levels, condition of fluids and check for leaks.
- Inspect cooling system hoses and connections.
- #Inspect exhaust system.
- #Inspect fuel lines and connections.
- # = See information on maintenance and emissions warranty, last column, page 153 of your owner's manual.

52,500 mi/84,000 km

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

60,000 mi/96,000 km/4 yrs

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.
- Inspect front and rear brakes.
- Replace engine oil filter.
- Check parking brake adjustment.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft boots.
- Inspect brake hoses and lines (including ABS).
- Check all fluid levels, condition of fluids and check for leaks.
- Inspect cooling system hoses and connections.
- #Inspect exhaust system.
- #Inspect fuel lines and connections.
- # = See information on maintenance and emissions warranty, last column, page 153 of your owner's manual.
- Replace air cleaner element.
- Replace rear differential fluid.
- Replace dust and pollen filter.
- Inspect drive belt.

67,500 mi/108,000 km

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

75,000 mi/120,000 km/5 yrs

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

- Inspect front and rear brakes.
- Replace engine oil filter.
- Check parking brake adjustment.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft boots.
- Inspect brake hoses and lines (including ABS).
- Check all fluid levels, condition of fluids and check for leaks.
- Inspect cooling system hoses and connections.
- #Inspect exhaust system.
- #Inspect fuel lines and connections.
- # = See information on maintenance and emissions warranty, last column, page 153 of your owner's manual.

82,500 mi/132,000 km

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

6 years

6 Speed Manual - Recommended service:

- Replace brake fluid (independent of mileage).

90,000 mi/144,000 km/6 yrs

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.
- Inspect front and rear brakes.
- Replace engine oil filter.
- Check parking brake adjustment.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft boots.
- Inspect brake hoses and lines (including ABS).
- Check all fluid levels, condition of fluids and check for leaks.
- Inspect cooling system hoses and connections.
- #Inspect exhaust system.
- #Inspect fuel lines and connections.
- # = See information on maintenance and emissions warranty, last column, page 153 of your owner's manual.
- Replace air cleaner element.
- Replace rear differential fluid.
- Replace dust and pollen filter.
- Inspect drive belt.

97,500 mi/156,000 km

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

105,000 mi/168,000 km/7 yrs

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.
- Inspect front and rear brakes.
- Replace engine oil filter.
- Check parking brake adjustment.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft boots.
- Inspect brake hoses and lines (including ABS).
- Check all fluid levels, condition of fluids and check for leaks.
- Inspect cooling system hoses and connections.
- #Inspect exhaust system.
- #Inspect fuel lines and connections.
- # = See information on maintenance and emissions warranty, last column, page 153 of your owner's manual.
- Replace spark plugs.
- Inspect valve clearance.
- Check idle speed.

112,500 mi/180,000 km

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.

120,000 mi/192,000 km/10 yrs

6 Speed Manual - Recommended service:

- Replace engine coolant, then replace every 60,000 mi/96,000 km/5 yrs.

120,000 mi/192,000 km/8 yrs

6 Speed Manual - Recommended service:

- Replace engine oil.
- Check tire inflation and condition.
- Inspect front and rear brakes.

- Replace engine oil filter.
- Check parking brake adjustment.
- Inspect tie-rod ends, steering gearbox and rack boots.
- Inspect suspension components.
- Inspect driveshaft boots.
- Inspect brake hoses and lines (including ABS).
- Check all fluid levels, condition of fluids and check for leaks.
- Inspect cooling system hoses and connections.
- #Inspect exhaust system.
- #Inspect fuel lines and connections.
- # = See information on maintenance and emissions warranty, last column, page 153 of your owner's manual.
- Replace air cleaner element.
- Replace rear differential fluid.
- Replace dust and pollen filter.
- Inspect drive belt.
- Replace transmission fluid.