

Maintenance Schedule

Performing regular maintenance according to the factory-recommended Maintenance Schedule is the best way to keep your Honda running in optimal condition.

Each vehicle has its own maintenance needs, so Honda develops specific maintenance schedules based on model equipment, such as transmission choice or the addition of a towing package.

The Maintenance Schedule calculates service needs based on your car's mileage. It checks engine-operating conditions and helps coordinate oil service dates and other maintenance check-ups. Prevent problems before they occur.

In order to view the maintenance schedule for a specific vehicle, please sign in — to view a saved vehicle — or choose a model.

[Normal](#)

Severe

7,500 mi/12,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

7,500 mi/12,000 km/1 yr

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

15,000 mi/24,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

15,000 mi/24,000 km/1 yr

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components

- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- [#]: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

15,000 mi/24,000 km/2 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

22,500 mi/36,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

22,500 mi/36,000 km/3 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

30,000 mi/48,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Replace air cleaner element
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

30,000 mi/48,000 km/2 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment

- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- [#]: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Inspect drive belts
- Replace dust and pollen filter
- Replace rear differential fluid
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

30,000 mi/48,000 km/4 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

37,500 mi/60,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

37,500 mi/60,000 km/5 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

45,000 mi/72,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

45,000 mi/72,000 km/3 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- [#]: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

45,000 mi/72,000 km/6 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

52,500 mi/84,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

52,500 mi/84,000 km/7 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

60,000 mi/96,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Replace air cleaner element
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

60,000 mi/96,000 km/4 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- #: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Inspect drive belts
- Replace dust and pollen filter
- Replace rear differential fluid
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

60,000 mi/96,000 km/8 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

67,500 mi/108,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

67,500 mi/108,000 km/9 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

75,000 mi/120,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

75,000 mi/120,000 km/5 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- [#]: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

75,000 mi/120,000 km/10 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

82,500 mi/132,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

82,500 mi/132,000 km/11 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

90,000 mi/144,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Replace air cleaner element
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

90,000 mi/144,000 km/6 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- #: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Inspect drive belts
- Replace dust and pollen filter
- Replace rear differential fluid
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

90,000 mi/144,000 km/12 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

97,500 mi/156,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

97,500 mi/156,000 km/13 yrs

6 Speed Manual - Recommended service:

- Replace engine oil

- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

105,000 mi/168,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Replace spark plugs
- Inspect valve clearance
- Inspect idle speed
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

105,000 mi/168,000 km/7 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- [#]: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

105,000 mi/168,000 km/14 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

112,500 mi/180,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

112,500 mi/180,000 km/15 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

120,000 mi/192,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Replace air cleaner element
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

120,000 mi/192,000 km/8 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- #: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Inspect drive belts
- Replace dust and pollen filter
- Replace manual transmission fluid
- Replace rear differential fluid
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

120,000 mi/192,000 km/10 yrs

6 Speed Manual - Recommended service:

- Replace engine coolant at 120,000 miles (192,000 km) or 10 years, then every 60,000 miles (96,000 km) or 5 years.
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

120,000 mi/192,000 km/16 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

127,500 mi/204,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

127,500 mi/204,000 km/17 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

135,000 mi/216,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

135,000 mi/216,000 km/9 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- [#]: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

135,000 mi/216,000 km/18 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

142,500 mi/228,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

142,500 mi/228,000 km/19 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

150,000 mi/240,000 km

6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Replace air cleaner element
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

150,000 mi/240,000 km/10 yrs

6 Speed Manual - Recommended service:

- Replace engine oil filter
- Check front and rear brakes
- Check parking brake adjustment
- Inspect the tie rod ends, steering gear box, and boots
- Inspect the suspension components
- Inspect the driveshaft boots
- Inspect the brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect the exhaust system[#]
- Inspect the fuel lines and connections[#]
- [#]: See information on maintenance and emissions warranty, middle column, page 122 of your owner's manual.
- Inspect drive belts
- Replace dust and pollen filter

- Replace rear differential fluid
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

150,000 mi/240,000 km/20 yrs

6 Speed Manual - Recommended service:

- Replace engine oil
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month

Every 3 Years

6 Speed Manual - Recommended service:

- Replace brake fluid (independent of mileage).
- Check engine oil and coolant at each fuel stop
- Check tire inflation and condition once a month