

# Maintenance Schedule

---

Performing regular maintenance according to the factory-recommended Maintenance Schedule is the best way to keep your Honda running in optimal condition.

Each vehicle has its own maintenance needs, so Honda develops specific maintenance schedules based on model equipment, such as transmission choice or the addition of a towing package.

The Maintenance Schedule calculates service needs based on your car's mileage. It checks engine-operating conditions and helps coordinate oil service dates and other maintenance check-ups. Prevent problems before they occur.

In order to view the maintenance schedule for a specific vehicle, please sign in — to view a saved vehicle — or choose a model.

## Maintenance Minder A

### 6 Speed Manual - Recommended service:

- Replace engine oil\*<sup>1</sup>
- \*1: If the message "SERVICE" does not appear more than 12 months after the display is reset, change the engine oil every year.
- Independent of the maintenance messages in the information display, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

## Maintenance Minder B

### 6 Speed Manual - Recommended service:

- Replace engine oil and oil filter
- Inspect front and rear brakes
- Check parking brake adjustment
- Inspect tie rod ends, steering gear box, and boots
- Inspect suspension components
- Inspect driveshaft boots
- Inspect brake hoses and lines (including ABS)
- Inspect all fluid levels and condition of fluids
- Inspect exhaust system<sup>#</sup>
- Inspect fuel lines and connections<sup>#</sup>
- <sup>#</sup>: See information on maintenance and emissions warranty on page 167 of your [owner's manual](#).
- Independent of the maintenance messages in the information display, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

## Maintenance Minder 1

### 6 Speed Manual - Recommended service:

- Check tire inflation and condition
- Independent of the maintenance messages in the information display, replace the brake fluid every 3 years.

- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

## Maintenance Minder 2

### **6 Speed Manual - Recommended service:**

- Replace air cleaner element  
If you drive in dusty conditions, replace every 15,000 miles (24,000 km).
- Replace dust and pollen filter  
If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace every 15,000 miles (24,000 km).
- Inspect drive belt
- Independent of the maintenance messages in the information display, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

## Maintenance Minder 3

### **6 Speed Manual - Recommended service:**

- Replace transmission fluid
- Independent of the maintenance messages in the information display, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

## Maintenance Minder 4

### **6 Speed Manual - Recommended service:**

- Replace spark plugs
- Inspect valve clearance
- Independent of the maintenance messages in the information display, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

## Maintenance Minder 5

### **6 Speed Manual - Recommended service:**

- Replace engine coolant
- Independent of the maintenance messages in the information display, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

## Maintenance Minder 6

### **6 Speed Manual - Recommended service:**

- Replace rear differential fluid

Driving in mountainous areas results in higher level of mechanical (shear) stress to fluid. This requires differential fluid changes more frequently than recommended by the maintenance minder. If you regularly drive your vehicle under these conditions, have the differential fluid changed every 15,000 miles (24,000 km).

- Independent of the maintenance messages in the information display, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.