

To deactivate automatic a/c feature on a 2002+ S2000:

- 1) Turn the ignition switch "on," but dont start the car.
- 2) Turn fan speed off.
- 3) Turn temperature **** all the way to the left (blue area).
- 4) Turn vent **** to all the way to the left (panel position).
- 5) Turn the ignitions switch "off."
- 6) Hold down both air recirculation button and a/c button while turning the ignition switch "on." Nothing lights up initially, keep waiting. The orange air recirculation indicator on the button will start flashing.
- 7) Continue holding both buttons until the orange air recirculation indicator stops flashing, then let go.