


Transmitter Test**NOTE:**

- If the doors unlock or lock with the transmitter, but the LED on the transmitter does not come on, the LED is faulty; replace the transmitter.
 - If any door is open, you cannot lock or unlock the door with the transmitter.
 - If you unlocked the doors with the transmitter, but do not open any of the doors within 30 seconds, the doors relock automatically.
 - The doors do not lock or unlock with the transmitter if the ignition key is inserted in the ignition switch.
1. Using a keyless entry checker (07MAJ-SP00300): Place the transmitter on the keyless entry checker and press the transmitter button.
 - If the indicator light does not come on, check for:
 - a dead or low battery
 - a faulty transmitter.
 - If the indicator light comes on, the transmitter is OK.

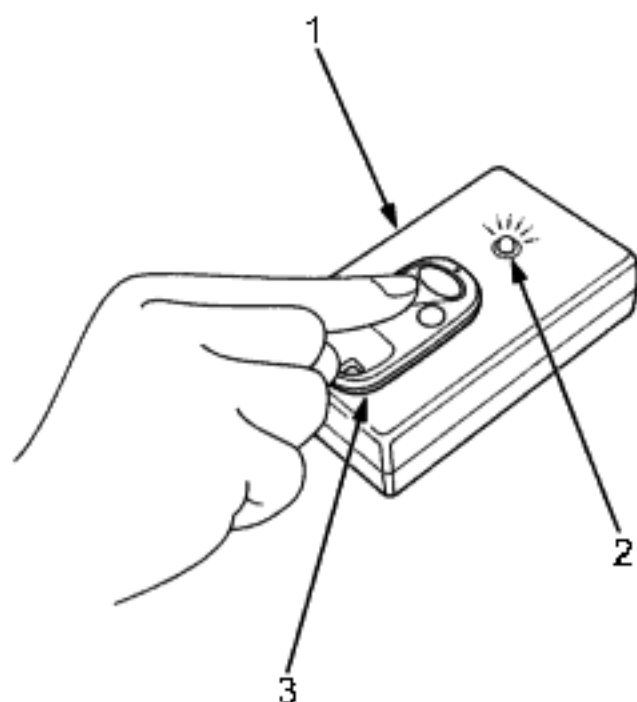

1. KEYLESS ENTRY CHECKER
2. INDICATOR LIGHT
3. TRANSMITTER

NOTE: After a transmitter battery has been replaced, aim the transmitter at the receiver, and press the transmitter button six times.

Confirm you can hear the sound of the door lock actuators when you press the sixth time.

Storing transmitter codes:

The codes of up to three transmitters can be read into the keyless receiver unit memory. (If a fourth code is stored, the code which was input first will be erased).

NOTE: It is important to maintain the time limits between the steps.

1. Turn the ignition switch ON (II).
2. Within 1 to 4 sec., push the transmitter lock or unlock button with the transmitter aimed at the receiver (control unit).
3. Within 1 to 4 sec., turn the ignition switch OFF.
4. Within 1 to 4 sec., turn the ignition switch ON (II).
5. Within 1 to 4 sec., push the transmitter lock or unlock button with the transmitter aimed at the receiver (control unit).
6. Within 1 to 4 sec., turn the ignition switch OFF.
7. Within 4 sec., turn the ignition switch ON (II).
8. Within 1 to 4 sec., push the transmitter lock or unlock button with the transmitter aimed at the receiver (control unit).
9. Within 1 to 4 sec., turn the ignition switch OFF.
10. Within 4 sec., turn the ignition switch ON (II).
11. Within 1 to 4 sec., push the transmitter lock or unlock button with the transmitter aimed at the receiver (control unit).
12. Confirm you can hear the sound of the door lock actuators. Within 1 to 4 sec., push the transmitter lock or unlock button again.
13. Within 15 sec., aim the transmitters (up to three) whose codes you want to store at the receiver, and press the transmitter lock or unlock buttons. Confirm that you can hear the sound of the door lock actuators after each transmitter code is stored.
14. Turn the ignition switch OFF, and pull out the key.
15. Confirm proper operation with the new code(s).