

AP1-2 to 05

Hold trip button then turn the ignition to the on position and wait for the maintenance light to go out then release the trip button.

AP2 06 and up

With key on, press trip button until "oil life%" shows up on the display. Hold trip button until the display starts to flash then release trip button and hold again until it resets.