


Modifry® Adapter Harness

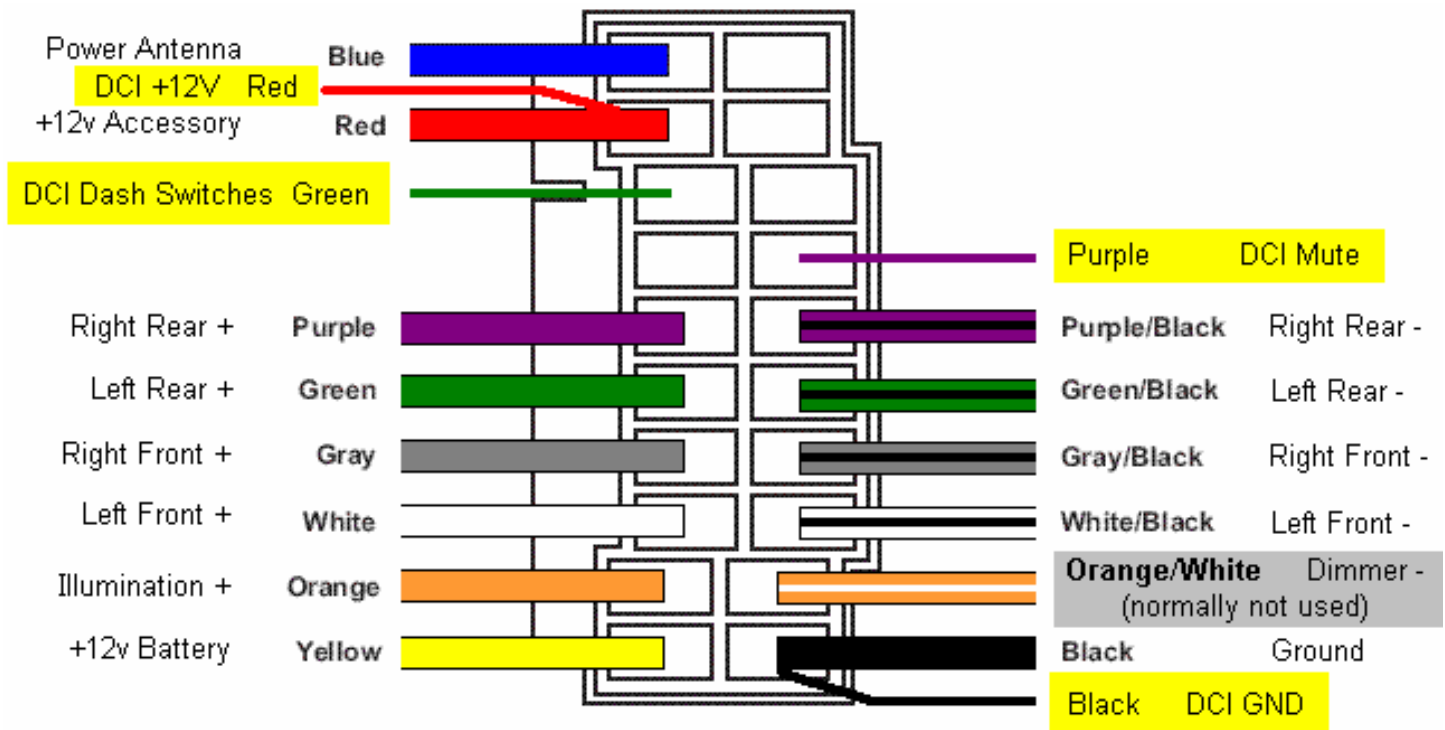

Connections for the DCI are highlighted with a yellow background and connect to the DCI harness only - match them by color. Other wires do not necessarily match by color. All connections to your head unit must be matched by FUNCTION, which may not follow the 'standard' color code shown in the above diagram. See the notes below and refer to the wiring diagram supplied with your head unit to verify all connections.

Additional Notes:

Blue (Power Antenna) wire - Connect to head unit **Power Antenna** wire if available or to head unit **'external amplifier trigger'** wire. If neither is available, connect to the red +12V accessory power wire.

Orange (Illumination +) wire - Intended to dim the head unit backlighting at night. The car will provide +12v on this wire when the headlights are ON. Read your head unit installation instructions to determine which head unit wire should be connected, usually identified as "headlights" or "illumination". Some HU use the orange wire but some will use orange/white – read your manual!

Orange/white (Dimmer -) wire - Normally not used and should be insulated. The car provides a variable DC voltage on this wire to adjust the brightness of the OEM head unit. Most after-market head units do not support this function.

Remember to insulate unused wires.